

# Salinity Mapping for Resource Management

---

within the M.D. of Provost, Alberta

*Prepared by*  
J. Kwiatkowski  
J. Pittman

Conservation and Development Branch  
Alberta Agriculture, Food and Rural Development

March 1997

Canada

  
*Agriculture - Building a Healthy Environment*

Alberta

## Abstract

This report presents a methodology to map salinity at a municipal scale and applies this procedure to the M.D. of Provost, a municipality in east central Alberta. The methodology was developed for the County of Vulcan (Kwiatkowski et al. 1994) and is being applied to other Alberta municipalities which have identified soil salinity as a concern.

Soil salinity is a major land degradation issue in the M.D. of Provost. The information on salinity location, extent, type and control measures presented in this report will help municipal planners to target salinity control and resource management programs.

The methodology has five steps:

1. The location and extent of saline areas are mapped based on existing information including aerial photographs, maps, satellite imagery, and information from local personnel and field inspections.
2. Saline areas are classified on the basis of the mechanism causing salinity. The mechanism is important because it determines which control measures are appropriate. Eight salinity types are recognized within Alberta but only five are found in the M.D. of Provost. These are: contact/slope change salinity, outcrop salinity, depression bottom salinity, coulee bottom salinity and artesian salinity.
3. Cost-effective, practical control measures are identified for each salinity type.
4. A digital data base is created in ArcInfo format with geographically referenced information on salinity location, type and extent. This data base can be easily managed and transformed into ArcView format. It can be used to create maps and calculate statistics. Additional text and graphic information can be added to the data base as the data become available.
5. Using the digital data base, a colour-coded 1:100 000 map of the M.D. is prepared, showing salinity location, extent and type. A report with a 1:200 000 map is also prepared.

Analysis of the mapping data shows that 1 851 saline areas occur in the M.D. and occupy a total of 16 099 ha (39 765 ac). This represents 4.3% of the M.D.'s total area. Only saline areas visible on the soil surface are mapped. This provides information needed by M.D. staff to target sites for further investigation. The lands surrounding visible saline seeps may have saline subsoils, resulting in a greater salinity risk. The salts in the subsoil can rise up into the root zone if weather conditions or cropping practices change. Thus, salinity control practices may benefit crop yields over a much broader area than just the visible seep.

Depression bottom salinity occupies the largest portion of the M.D.'s total saline area (85.8%), followed by coulee bottom salinity (9.8%), contact/slope change salinity (4.2%) and outcrop salinity (0.2%). Artesian salinity is a very minor type in the M.D. (0.009%). There is no evidence that slough ring, canal seepage and natural/irrigation salinity occur in the M.D.

## **Acknowledgements**

This salinity mapping and analysis project for the M.D. of Provost was managed by the Conservation and Development Branch of Alberta Agriculture, Food and Rural Development. Funding provided by the Conservation and Development Branch, the Canada-Alberta Environmentally Sustainable Agriculture (CAESA) Agreement and the M.D. of Provost is greatly appreciated.

The authors acknowledge the contributions made by: Eugene Kurinka, Conservation and Development Branch, for field work; Gerald Stark, Longin Pawlowski and Scott Rudman, Conservation and Development Branch, for preparing diagrams and cover, and plotting the salinity map; Carolyn King, Conservation and Development Branch, for editing the report; and Leon Marciak and Don Wentz, Conservation and Development Branch, for technical review. Comments on the salinity data from Burt Forbes, Agricultural Fieldman, M.D. of Provost, are greatly appreciated.

# Contents

	Page
Abstract .....	i
Acknowledgements .....	ii
Tables .....	iv
Figures .....	iv
1.0 Introduction .....	1
1.1 Goal and Objectives .....	1
1.2 Methodology .....	1
1.3 Information Sources .....	2
2.0 Classification of Saline Seeps .....	3
2.1 Transportation of Salts .....	3
2.2 Salinity Types .....	4
2.2.1 Dryland Salinity Types .....	4
2.2.2 Irrigation Salinity Types .....	7
3.0 Dryland Salinity Control Methods .....	8
3.1 Biological Controls for Recharge Areas .....	8
3.1.1 Deep-Rooted Perennial Crops .....	9
3.1.2 Alfalfa .....	9
3.1.3 Annual Crops .....	11
3.2 Biological Controls for Discharge Areas .....	11
3.2.1 Plant Species .....	12
3.2.2 Seeding .....	13
3.3 Structural Controls .....	14
3.3.1 Surface water management .....	14
3.3.2 Subsurface water management .....	14
3.3.3 Relief wells .....	15
4.0 Saline Water Bodies in the M.D. of Provost .....	16
5.0 Saline Seep Distribution in the M.D. of Provost .....	32
6.0 References .....	37
Glossary .....	38

## Tables

	Page
Table 1. Salinity types and recommended control measures .....	8
Table 2. Salinity rating and electrical conductivity value .....	12
Table 3. Grass species recommended for seeding into saline seeps .....	13
Table 4. Water sample locations and EC measurements in the M.D. of Provost .....	17
Table 5. Salinity distribution by type in the M.D. of Provost .....	32

## Figures

	Page
Figure 1. Generalized saline seep mechanisms .....	3
Figure 2. Contact salinity .....	4
Figure 3. Slope change salinity .....	5
Figure 4. Outcrop salinity .....	5
Figure 5. Artesian salinity .....	6
Figure 6. Depression bottom salinity .....	6
Figure 7. Slough ring salinity .....	7
Figure 8. Canal seepage salinity .....	7
Figure 9a. Saline water bodies and associated salinity types, Twp. 36 Rge. 1 W4, M.D. of Provost .....	18
Figure 9b. Saline water bodies and associated salinity types, Twp. 38 Rge. 5 W4, M.D. of Provost .....	19
Figure 9c. Saline water bodies and associated salinity types, Twp. 38 Rge. 6 W4, M.D. of Provost .....	20
Figure 9d. Saline water bodies and associated salinity types, Twp. 39 Rge. 3 W4, M.D. of Provost .....	21
Figure 9e. Saline water bodies and associated salinity types, Twp. 39 Rge. 5 W4, M.D. of Provost .....	22
Figure 9f. Saline water bodies and associated salinity types, Twp. 39 Rge. 6 W4, M.D. of Provost .....	23
Figure 9g. Saline water bodies and associated salinity types, Twp. 39 Rge. 7 W4, M.D. of Provost .....	24
Figure 9h. Saline water bodies and associated salinity types, Twp. 39 Rge. 8 W4, M.D. of Provost .....	25
Figure 9i. Saline water bodies and associated salinity types, Twp. 40 Rge. 4 W4, M.D. of Provost .....	26
Figure 9j. Saline water bodies and associated salinity types, Twp. 40 Rge. 9 W4, M.D. of Provost .....	27
Figure 9k. Saline water bodies and associated salinity types, Twp. 41 Rge. 6 W4, M.D. of Provost .....	28
Figure 9l. Saline water bodies and associated salinity types, Twp. 41 Rge. 7 W4, M.D. of Provost .....	29
Figure 9m. Saline water bodies and associated salinity types, Twp. 42 Rge. 6 W4, M.D. of Provost .....	30
Figure 9n. Saline water bodies and associated salinity types, Twp. 42 Rge. 8 W4, M.D. of Provost .....	31
Figure 10. Number of saline seeps by type in the M.D. of Provost .....	34
Figure 11. Number and size of total saline seeps in the M.D. of Provost .....	35
Figure 12. Number and size of contact/slope change saline seeps in the M.D. of Provost .....	36

## **1.0 Introduction**

### **1.1 Goal and Objectives**

The goal of this project is to present information on salinity location, extent and type in the Municipal District of Provost. Soil degradation is a key issue in conservation planning, and salinity is one of the most visible soil degradation problems affecting the M.D. according to its Canada-Alberta Environmentally Sustainable Agriculture (CAESA) Agreement action plan. Therefore this mapping project aims to better define the salinity problem for the M.D. of Provost.

The project's goal is achieved through the following objectives:

1. To derive and integrate existing salinity information for agricultural land in the M.D. of Provost.
2. To determine the salinity type, based on the mechanism causing the salinity, for saline seeps in the M.D.
3. To recommend appropriate control methods for each type of salinity.
4. To compile a map depicting salinity location, extent and type.

The project differs from most salinity surveys by specifying the type, exact locations and control measures. This information can be used in municipal and farm conservation planning.

### **1.2 Methodology**

The methodology for mapping salinity was developed for the County of Vulcan by Kwiatkowski et al. (1994). It is being applied to other Alberta municipalities where soil salinity is a concern (see page 39 for a list of reports completed to date). The process of salinity mapping consists of five stages:

1. Scan aerial photographs and digitize saline areas on the municipal base map. Only saline areas visible on the soil surface are mapped. (The lands surrounding visible saline seeps may have saline subsoils.)
2. Determine the types of salinity occurring in the municipality, based on hydrogeology, surface water flow, geology, topography, irrigation and soils. Determine appropriate cost-effective, practical control measures based on salinity types.
3. Field check the salinity data and submit the draft salinity information to a technical team consisting of a project manager, hydrogeologist, salinity specialist and the local agricultural fieldman for review.
4. Create a digital data base in ArcInfo format with geographically referenced information on salinity location, type and extent. This data base can be easily managed and transformed into ArcView format. It can be used to create maps and calculate statistics. Additional text and graphic information can be added to the data base as the data become available.
5. Using the digital data base, prepare a colour-coded 1:100 000 map, showing salinity location, extent and type, and prepare a report with a 1:200 000 map.

### **1.3 Information Sources**

A variety of maps, aerial photographs and other information sources were used for this project. Information on climate, soils, parent material and geology is from the following soil survey and hydrogeology reports:

- Soil Survey of Wainwright and Vermilion Sheets (Wyatt et al. 1944)
- Soil Survey of Sullivan Lake Sheet (Wyatt et al. 1938)
- Hydrogeology of the Vermilion Area, Alberta, Report 75-5 (Currie and Zacharko 1976)

Aerial photographs from 1987 (scale of 1:15 000) were used to help determine the location, extent and type of salinity on a section-by-section basis. As well, satellite imagery was used, particularly to identify irrigated lands.


To ensure the accuracy of the salinity map, more than two-thirds of the M.D. was field checked. Local personnel were also consulted to validate the findings.

## 2.0 Classification of Saline Seeps

### 2.1 Transportation of Salts

The dominant salts in the M.D. of Provost consist of sodium and magnesium sulphates. Analyses of groundwater, saline soils and parent material suggest that the primary source of salts is bedrock, and the secondary source is glacial till (Greenlee et al. 1968). Soils developed on the Bearpaw bedrock formation contain high salt concentrations.

Saline seeps form when saline groundwater rises to the ground surface. Contact and slope change seeps (described in Section 2.2.1) develop when water in a recharge area percolates down through the soil profile beyond the root zone and dissolves soluble salts (Figure 1). The water moves laterally to a lower position in the landscape and through capillarity rises to the surface, resulting in a saline seep. High evapotranspiration rates cause the capillary rise and the deposition of salts on the soil surface.

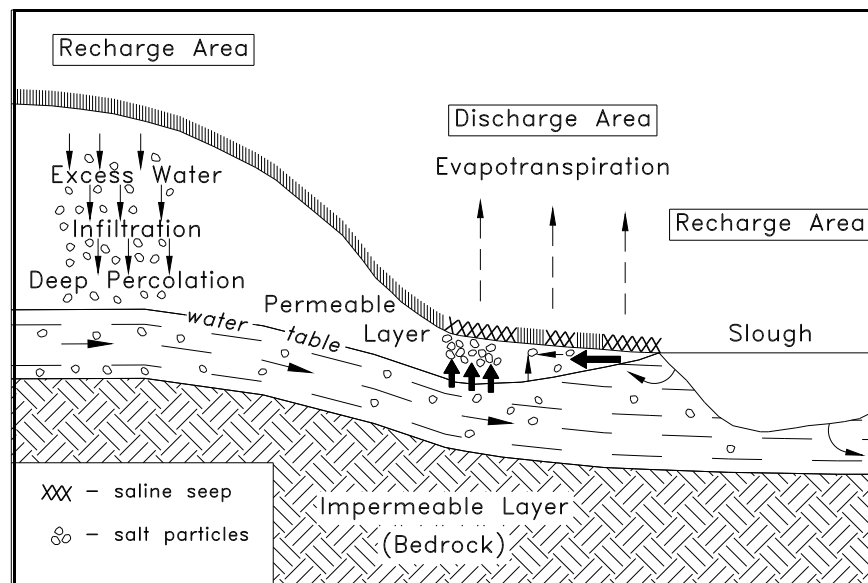

**Figure 1. Generalized saline seep mechanisms**

Three different types of flow may be recognized within a groundwater basin: local, intermediate and regional. A local flow system occupies a relatively small area, with the recharge area at a higher elevation than the discharge area. An intermediate system consists of several interconnected local systems. In the M.D. of Provost, most of the groundwater flow systems are local, and the recharge areas are within a few hundred metres of their discharge area. Intermediate flow systems extend beyond 1 km (0.6 miles) of their recharge area. Regional flow systems extend over several kilometres.

Groundwater movement is influenced by topography as follows:

- In large, flat areas, groundwater movement is minimal or even impeded.

- In areas with well-defined local relief (e.g. hummocky or rolling landscapes), local flow systems are prevalent
- In areas with one large slope, regional and intermediate systems are prevalent.
- In large valleys, regional systems predominate.

## 2.2 Salinity Types


Eight salinity types have been identified in Alberta (Kwiatkowski et al. 1994). They can be grouped into six dryland and two irrigation types. The seeps are classified based on hydrogeology, surface water flow, geology, topography, irrigation and soils. Where several salinity mechanisms influence the formation of a single seep, the dominant mechanism is reported. Five of the eight types occur in the M.D. of Provost. The 1:200 000 map in the back-cover pocket of this report shows the distribution of saline seeps by type for the M.D.

### 2.2.1 Dryland Salinity Types

#### 1. Contact/Slope Change Salinity


Contact salinity and slope change salinity are grouped together because they cannot be differentiated on aerial photographs and because the same methods are used to control both types (see Section 3.0). The two types are described as follows:

- Contact salinity** occurs where a permeable, water-bearing surface layer thins out above a less permeable layer, such as a fine-textured layer (Figure 2). This forces the groundwater closer to the surface. Contact salinity is the third most common salinity type in the M.D., occupying almost 4.2% of all saline land. It dominates in sandy, gently rolling areas. It is very common in Twp. 36, 37 Rge. 1 and Twp. 38, 39 Rge. 2, 3, 4.

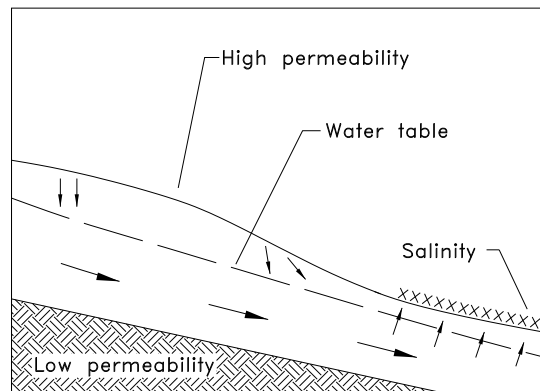

**Figure 2. Contact salinity**


- Slope change salinity** occurs where the slope decreases. This decrease results in a slowing of the groundwater flow and a shallower water table (Figure 3). This type of seep expands upslope. It occurs in association with contact salinity and is found throughout the M.D. as a minor salinity type.

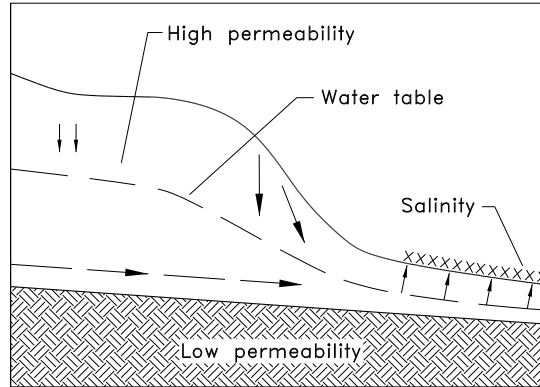

**Figure 3. Slope change salinity**

## 2. Outcrop Salinity


Outcrop salinity occurs where a permeable, water-bearing layer, such as a coal seam or fractured bedrock layer, outcrops at or near the surface (Figure 4). Outcrop salinity often occurs along a slope at similar elevations. In the M.D. of Provost, this salinity type is very minor and occupies only 0.2% of all saline land. It occurs mainly in two areas: Twp. 36 Rge. 1 and Twp. 41 Rge. 6.

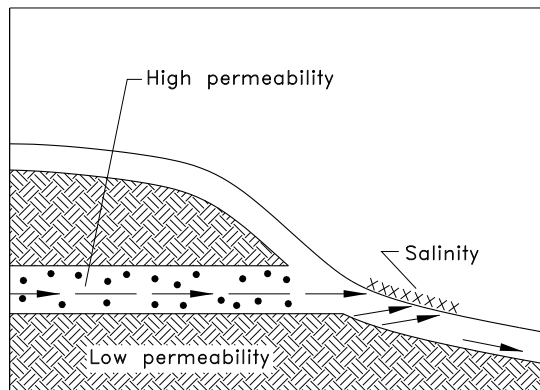

**Figure 4. Outcrop salinity**

## 3. Artesian Salinity


Artesian salinity occurs where water from a pressurized aquifer rises to or near the ground surface (Figure 5). It is usually associated with intermediate or regional groundwater flow systems. If the pressure is high enough, the water flows to the surface and produces a flowing well, spring or soap hole. Artesian seeps can be identified from the presence of these flow features in combination with hydrogeological maps. Only one artesian seep occurs in the M.D. It is located in Twp. 39 Rge. 4.

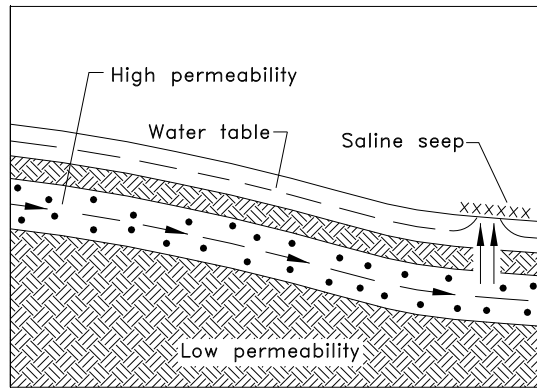

**Figure 5. Artesian salinity**

#### **4. Depression Bottom Salinity**

This salinity type occurs in low lying areas. Surface water is trapped temporarily in these low areas until the water drains off and/or infiltrates the soil. Some water in the soil flows upslope through the upper soil in an unsaturated state and then surfaces to evaporate and deposit salt at the edge of the ponded area (Figure 6). As well, once the surface water has disappeared, groundwater from the water table rises by capillary action to the surface in and around the previously ponded area. Depression bottom seeps are well defined with distinct, rounded edges.

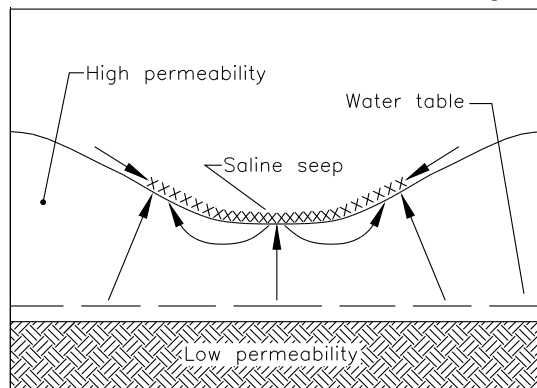

**Figure 6. Depression bottom salinity**

This salinity type predominates in the M.D. of Provost, occupying almost 86% of all saline land. It is found throughout the M.D. Depression bottom seeps occur in several landscapes with poor drainage, particularly in gently rolling areas. They are also associated with Solonchic soils which occur throughout the M.D.

#### **5. Coulee Bottom Salinity**

Coulee bottom salinity forms in the bottoms of coulees and watercourses. This salinity type typically develops over long periods of time so most lands affected by it have never been in agricultural production. In the M.D. of Provost, coulee bottom salinity occupies almost 10% of all saline land. It occurs mainly in Twp. 37 Rge. 1, Twp. 40, 41 Rge. 3, 4 and Twp. 40 Rge. 7.



### 3.0 Dryland Salinity Control Methods

Salinity is a complex problem caused by climatic, hydrogeological and agricultural factors. The opportunities for moderating the effects of climate and hydrogeological processes are limited and/or expensive. Therefore appropriate agricultural practices are recommended where possible to help prevent or control saline seeps.

Table 1 summarizes the salinity control measures recommended for each salinity type. The emphasis in this section is on cost-effective, agronomic measures to control dryland saline seeps. Specifically, cropping systems that intercept soil water in the recharge area before the water moves below the crop root zone are recommended. For control of irrigation-related salinity, contact your local Alberta Agriculture irrigation specialist to determine appropriate structural measures (e.g. subsurface drainage, canal lining, cutoff curtains) and/or farm water management measures (e.g. cropping system, water management methods, irrigation methods).

**Table 1. Salinity types and recommended control measures**

Salinity type	Control
Contact/Slope change salinity	Salt-tolerant grasses in the saline area and alfalfa in the upslope dominant recharge area
Outcrop salinity	Salt-tolerant grasses in the saline area; subsurface water management if appropriate
Artesian salinity	Salt-tolerant grasses in the saline area; relief wells connected to suitable outlets
Depression bottom salinity	Salt-tolerant grasses in the saline area and along the edge of the depression in a band extending an additional 20 to 60 m beyond the visibly saline area; appropriate surface water management
Coulee bottom salinity	Salt-tolerant grasses in the saline area; appropriate surface water management
Slough ring salinity	Salt-tolerant grasses in a band around the slough in the visibly saline area and extending an additional 20 to 60 m beyond; appropriate surface water management
Irrigation canal seepage salinity	Structural controls to prevent canal seepage (canal lining, cut-off curtains), and/or subsurface drainage of affected area
Natural/irrigation salinity	Appropriate structural controls for irrigation-related salinity; salt-tolerant grasses for natural salinity

### 3.1 Biological Controls for Recharge Areas

Biological controls, including deep-rooted perennials and annual crops, are grown in recharge areas of contact and slope change seeps to lower the water table. The recharge areas of coulee bottom, outcrop and artesian salinity are usually too large or too poorly defined for biological recharge controls to be effective. Depression bottom and slough ring salinity can also benefit from perennial forage cover (see Table 1).

### 3.1.1 Deep-Rooted Perennial Crops

Deep-rooted perennial crops are preferred over annual crops for seeding in *dominant recharge areas*. Dominant recharge areas are those portions of the entire recharge area that make the greatest contribution to the water table. Annual crops are used in the non-dominant recharge areas of a field and in places where the bedrock is too shallow for deep-rooted crops to be effective or where precipitation is low.

Deep-rooted perennials are seeded in the recharge area to reduce percolation to the water table. This lowers the water table and restores the soil's water-storage capacity in the recharge area. As a result, groundwater flow from the recharge area to the discharge area is reduced. As the water table in the discharge area falls, precipitation begins to leach salts down below the seed bed. Gradually the seep is controlled and may even be brought back into annual crop production.

Perennial forages, especially deep-rooted species, are preferred over annual crops for several reasons. Most perennial crops can respond to fall and early spring precipitation while most annual crops cannot. Deep-rooted perennial forages use more water per unit depth of soil and from a greater depth. Perennial forages also increase soil organic matter content, improve soil structure and reduce soil erosion. Legumes, like alfalfa, also increase soil fertility through nitrogen fixation.

### 3.1.2 Alfalfa

Alfalfa is the preferred perennial for planting in recharge areas because of its deep-rooting capability, high water-use requirement, extended growing season and commercial value. Tap-rooted alfalfa varieties generally have deeper rooting capabilities than creeping-rooted varieties. Tap-rooted alfalfa will use 760 mm of water per year if available. It can root up to 6 m deep over a five- to six-year period, depending on the depth of soil, bedrock and water table. Alfalfa should be used in areas that have ample precipitation and deep soils with a high water-holding capacity. Areas without these factors are better suited to annual crops.

**Site selection:** Seeding alfalfa into the dominant recharge area of a contact or slope change saline seep is often the quickest and most effective way to control the seep. Most of the region upslope of a contact or slope change seep may be a potential recharge area. Those portions of the upslope area which are dominant recharge areas are often characterized by depressions, watercourses, borrow pits and shelterbelts where water and snow accumulate. Areas with coarse-textured soils or shallow bedrock with a low potential for additional moisture storage, and areas with shallow water tables may also be dominant recharge areas. Dominant recharge areas are on average about three to five times larger than their saline seeps. For slope change and contact saline seeps, the dominant recharge areas are often close to the seep, typically within 1 km.

**Variety selection and establishment:** Tap-rooted varieties of alfalfa are generally recommended for recharge control. However, if stand establishment is a concern then creeping-rooted varieties can be mixed with tap-rooted varieties to help fill in the stand. The Alberta Forage Manual (Agdex 120/20-4) provides recommendations for selecting suitable varieties and for establishing forages.

The manual is available from your local Alberta Agriculture office. This information is updated annually in Varieties of Perennial Hay and Pasture Crops (Agdex FS120/32).

**Seeding:** Alfalfa should be planted as shallowly as possible into a firm, moist seed bed. The recommended seeding rate is about 7 kg/ha. Where possible, plant alfalfa directly into undisturbed stubble to maintain good seed-to-soil contact, conserve soil moisture, and achieve the proper seeding depth. If alfalfa is planted into bare, fallow land, packing is usually required.

Companion crops should be used only if soil erosion is a concern. A companion crop competes with alfalfa for moisture and nutrients, and reduces the vigour of the alfalfa stand. If a cover crop is needed, use half its normal seeding rate.

The most successful time for seeding alfalfa is early spring. Planting can be done in late April or early May because alfalfa is somewhat frost tolerant. Alfalfa can be planted as late as mid June with satisfactory results. However, summer planting on dryland is not usually successful. Planting in late fall after freeze-up is an option, but the soil temperature should be below 2°C to ensure that germination does not occur until spring.

Alfalfa can be seeded using any conventional seeder. Hoe drills and zero-till drills often give good results because of good depth control and packing capability. Disk drills work best if the seed bed is uniform and moderately firm. However, in loose soil disk drills may place the seed too deeply, and in very firm soil they may leave the seed on the soil surface. Both conditions result in poor germination.

**Fertilization:** Alfalfa can use atmospheric nitrogen through a symbiotic relationship with specific rhizobia bacteria. These bacteria do not exist naturally in Alberta soils. Therefore alfalfa seeds should be inoculated to ensure good stand development (see Inoculation of Legume Crops, Agdex FS100/23-1, for more information). Healthy alfalfa stands with good nodule development should not be fertilized with nitrogen because fertilizing will reduce the vigour of the nodules and more nitrogen fertilizer will then be needed.

A soil test should be done to determine phosphorus needs. Alfalfa requires 5 kg of phosphorus per tonne of yield. The phosphorus application should meet alfalfa's requirements for the life of the stand. For example, if the target yield is 1800 kg/year and the life of the stand is five years, then 45 kg of phosphorus should be available. Phosphorus fertilizer should be deep banded in the fall prior to planting alfalfa in the spring.

Potassium and sulphur are also important nutrients for optimum alfalfa production. A soil test should be performed to determine nutrient needs.

**Weed control:** Weeds and volunteer annual crops are often a problem when establishing alfalfa. Simply mowing annual weeds and volunteer annual crops at an early stage usually suppresses their growth and allows alfalfa to dominate. The herbicides currently available for in-crop control of broad-leaved perennial weeds in alfalfa may also kill the alfalfa. Therefore, where possible,

these weeds should be controlled before seeding alfalfa. Perennial grassy weeds, like foxtail barley, readily invade grass and alfalfa stands. At present, very few herbicides are available for in-crop control of grassy weeds in alfalfa. Alberta Agriculture's Crop Protection with Chemicals (Agdex 606-1) lists herbicides for weed control in alfalfa and other forages.

**Stand duration:** Alfalfa usually takes about five to six years to reach its maximum rooting depth and lower the water table in the recharge area. This, in turn, gradually lowers the water table in the discharge area. Eventually the water table and salt load in the discharge area will drop below the root zone. Once this occurs, the recharge area should be converted to cereal crops. The recharge area can remain in cereal crop production until the water table in the discharge area begins to rise again. The discharge area could also be planted to an annual crop at this time. However, most producers prefer to leave the discharge area in salt-tolerant forages because of the difficulty in re-establishing a forage crop if the discharge area does re-salinize.

### 3.1.3 Annual Crops

Annual crops are recommended for planting in non-dominant recharge areas. Annual crops should be planted in dominant recharge areas only if the bedrock is too shallow for deep-rooted perennial crops to be effective or if precipitation is too low for growing deep-rooted perennials. Although not as effective as a perennial crop, an annual crop has some ability to lower the water table in the recharge area. An annual crop is much better than no crop in the recharge area.

Most of the region directly upslope of a contact or slope change saline seep may be a potential recharge area. For recharge control, continuous cropping is recommended wherever possible. A field should be recropped if stored spring soil moisture and rainfall probabilities are favourable for a positive net return on the crop. The field is fallowed if conditions are not favourable. A field should never be fallowed for two years in a row.

Direct seeding or reduced tillage systems conserve soil moisture and thus improve the potential for recropping in drier areas. Also, spring soil moisture can be increased by snow trapping. Snow trapping methods must distribute snow evenly without forming large drifts because large drifts can cause significant groundwater recharge.

Snow trapping methods include:

- stubble - Stubble traps snow better than bare soil, and tall stubble traps snow better than short stubble.
- shelterbelts - The ability of shelterbelts to trap snow can be manipulated by such factors as species selection and tree pruning. More information on shelterbelt design is available in several Alberta Agriculture publications including Field Shelterbelts for Soil Conservation (Agdex 277/20-3) and Shelterbelt Varieties for Alberta (Agdex 277/33-1)

## 3.2 Biological Controls for Discharge Areas

Plants provide soil cover and shading to reduce evaporation and thereby reduce the rise of salty water to the surface of the discharge area. Plants also protect soil from erosion. Usually salt-tolerant

perennial crops are seeded into discharge areas. However, even a crop residue cover or weeds such as kochia are preferable to bare soil.

Biological discharge controls help to limit expansion of a saline seep, but they cannot bring a saline seep back into annual crop production on their own. These controls are only possible when the salt concentration in the seep is not so high as to completely prevent all plant growth.

### 3.2.1 Plant Species

Select plant species that can tolerate the amount of salinity in the discharge area. A soil test will give the salinity rating in terms of electrical conductivity (EC). Table 2 shows the relationship between the salinity rating and EC values.

**Table 2. Salinity rating and electrical conductivity value**

Soil Depth (cm)	Non-Saline	Weakly Saline	Moderately Saline	Strongly Saline	Very Strongly Saline
0 - 60	<2 ds/m*	2 - 4 ds/m	4 - 8 ds/m	8 - 16 ds/m	>16 ds/m
60 - 120	<4 ds/m	4 - 8 ds/m	8 - 16 ds/m	16 - 24 ds/m	>24 ds/m

\* ds/m = decisiemens per metre, a unit of measure for electrical conductivity

Table 3 lists characteristics of various salt-tolerant grass species recommended for seeding into saline seeps. Flooding tolerance is usually a requirement because saline areas are often temporarily saturated in the spring. Note that creeping foxtail is only moderately salt-tolerant in the seedling stage and thus will be hard to establish. Also, slender wheatgrass is recommended only when mixed with another grass species. Slender wheatgrass is quick to establish and thus provides good cover while the main grass species becomes established. Slender wheatgrass will die out within two or three years, once the main grass is established. If possible, plant slender wheatgrass and the main species in separate rows.

If the area is highly saline, very salt-tolerant grasses, like Nuttall's alkali grass, are recommended. However, these grasses produce much lower tonnages per acre than wildrye grasses and wheatgrasses. Plants under stress do not perform to their maximum potential.

Note that alfalfa seedlings are not salt-tolerant, even though mature alfalfa is moderately to highly salt-tolerant. Thus alfalfa should not be planted directly into a saline discharge area.

A mix of salt-tolerant grasses may be better than a single grass species in some cases. If the soils in the discharge area are variable, it may be impossible to select a single species to suit the whole area. Also, it is sometimes difficult to select a single species that continues to grow well when moisture and salinity conditions change in the seep. For more information on grass species and mixes, refer to the Alberta Forage Manual.

**Table 3. Grass species recommended for seeding into saline seeps**

Species	Seeding rate (kg/ha)	Rate of establishment	Sod or bunch	Salinity tolerance*	Longevity	Winter hardiness	Flooding tolerance	Drought tolerance
creeping foxtail	5-10	average	sod	high	long	good	high	poor
meadow foxtail	5-10	average	sod	medium	long	good	high	poor
smooth bromegrass	5-10	slow	sod	medium	long	excellent	medium	good
meadow bromegrass	5-10	slow	sod	medium	long	excellent	medium	good
slender wheatgrass	5-10	very fast	bunch	high	short	good	medium	good
intermediate wheatgrass	5-10	fast	sod	medium	short	excellent	medium	good
pubescent wheatgrass	5-10	fast	sod	medium	short	excellent	medium	good
tall wheatgrass	5-10	fast	bunch	high	long	excellent	high	poor
western wheatgrass	5-10	fast	sod	high	long	excellent	high	good
Russian wildrye	5-10	very slow	bunch	high	long	good	poor	good
altai wildrye	5-10	very slow	bunch	high	long	excellent	medium	good
beardless wildrye	5-10	very slow	sod	very high	long	good	medium	good
Nuttall's alkali grass	5-10	average	sod	very high	long	good	medium	good

\* medium: tolerates up to 6 to 8 ds/m; high: tolerates up to 8 to 12 ds/m; very high: tolerates greater than 12 ds/m.  
Source: Henry Najda, Alberta Agriculture, Food and Rural Development

**Forage mixes:** Care should be used in feeding crops grown in saline seeps to livestock. Research by Agriculture and Agri-Food Canada shows that high levels of sulphate and trace metals are common in plants grown in saline seeps. If there is any concern about forage quality, a feed test should be done.

When selecting a grass mix for hay production, choose one that can be easily harvested. Low growing or basal growth grasses are difficult to swath and bale. More information is available in the Alberta Forage Manual.

Select species that are suited to the conditions in the seep and to your grazing needs (refer to the grazing calendar in the Alberta Forage Manual). Wheatgrasses are a good choice for spring pasture due to their lush spring growth but become coarse and rank in the late summer and fall. Wildrye grasses are a good choice for fall pasture. Wildrye grasses usually start slowly in the spring, but produce good forage and cure well on the stem. Mixing wheatgrass and wildrye grass species is not recommended because only half the possible production will be achieved from the pasture. If the pasture is grazed in the spring, the wildrye grass will not provide good grazing. If the pasture is grazed in the fall, the wheatgrass will not provide good grazing.

### 3.2.2 Seeding

Establishing vegetation on a saline seep can be very difficult. One option is to seed in the fall when the seeps are dry and accessible. Seeding rates for saline seeps should be double those for non-saline areas (see Table 3). In severe situations, sprigging may be an option.

For all types of saline seeps, plant salt-tolerant grasses in an area larger than the visibly saline area to ensure good control. For saline sloughs and depression bottom seeps, plant salt-tolerant grasses in a band around the saline wetlands. This band should cover the visibly saline area and extend an additional 20 to 60 m further.

### **3.3 Structural Controls**

Generally, structural controls lower water tables and improve accessibility in discharge areas faster than biological controls. However, structural controls are usually more expensive than biological controls and are not always totally effective. More importantly, they usually require a licence from Alberta Environmental Protection because of their potential environmental impacts.

Structural controls for discharge areas include surface water management, subsurface water management and relief wells. Structural controls for recharge areas usually involve only surface water drainage.

#### **3.3.1 Surface water management**

Grassed waterways can be used to drain excess water ponded in discharge or recharge areas. Their main advantage is the erosion protection provided to the drainage channel by the grass cover and low channel slope. Grassed waterways are typically flat-bottomed with a standard bottom width of 3 m, which allows construction with a grader or scraper. The side slopes are less than 25 per cent (1 m vertical to 4 m horizontal) so the waterways can be easily crossed by farm equipment. The best forage mix for a grassed waterway depends on the nature of the area being seeded. Refer to Watercourse Improvement and Gully Restoration (Agdex 573-5) and Grassed Waterway Construction (Agdex 573-6) for more information on construction, forage mixes and maintenance.

#### **3.3.2 Subsurface water management**

Subsurface (tile) drainage involves the installation of perforated, corrugated plastic tubing. Subsurface drainage is not commonly used to control dryland salinity because it is expensive, not suited to all salinity types, and requires engineering design. However, it will satisfactorily lower water tables in dryland seeps if the conditions are right and the system is properly designed, installed and managed.

The purpose of subsurface drainage is to remove water and desalinize the root zone through leaching. Initially subsurface drainage removes groundwater near the drainage tile. Over time, precipitation leaches salts from the root zone, and the subsurface drainage removes the leachate so the salty water cannot rise back up to the soil surface.

Subsurface drainage is more effective when above-average precipitation increases leaching. Leaching of salts can be enhanced with low-moisture-use crops, summerfallow and snow trapping on the drained area.

Subsurface tubing can be installed with various types of machinery. The trenchless plow is the most commonly used. It installs the tubing in a single operation. Automatic laser grade-control equipment may be used to keep the tubing at the correct grade. Bucket-wheel and bucket-ladder trencher machines are also available. These types of machines usually excavate the trench and lay the tubing in one operation; backfilling of the trench is a separate operation. If the seep is extremely wet, a backhoe or even a dragline may be needed. A backhoe and hand laying can be used for small projects, particularly in stony areas, as long as the tubing is at the correct grade.

More information on subsurface drainage is available in the Alberta Drainage Guide (Agdex 725-1 to 725-6). Before construction begins, a detailed engineering plan and cost estimate should be completed for the drainage system. Alberta Agriculture irrigation specialists provide engineering design services for subsurface drainage systems on a fee-for-service basis.

In particular, an engineering design is needed to identify a suitable outlet for the drained water. Depression bottom and slough ring salinity types occur in low areas of the landscape, making it difficult to locate an outlet lower than the seep. Subsurface drainage could be used for controlling some outcrop saline seeps because outlets can be easier to locate and because biological controls are not always effective for controlling outcrop salinity.

### **3.3.3 Relief wells**

Relief wells are costly and require engineering design, but they can effectively control springs and soapholes associated with artesian salinity under certain conditions. The wells should be completed in the pressurized water-bearing layer. In Alberta, these layers may consist of coal, gravel, sand or fractured bedrock. Proper installation requires very detailed soil and groundwater investigations. The relief well may flow free, be pumped, or be connected to a buried drain. Alberta Agriculture irrigation specialists provide engineering design services for relief wells on a fee-for-service basis.

Relief wells can be more effective than subsurface drainage in controlling high water tables. If the quality of the drained water is good, the water could be used for domestic or livestock purposes.

## 4.0 Saline Water Bodies in the M.D. of Provost

Salt concentration is an important measure of water quality for cattle health and productivity. As part of the salinity mapping project, water bodies in the M.D. of Provost were sampled for salinity concentrations.

Livestock will normally avoid saline water if given the choice, but in some situations they may have to drink it. Use of water with total dissolved solids (TDS) concentrations higher than 3 000 mg/L should be restricted depending on livestock type, age and reproductive state (Task Force on Water Quality Guidelines 1987). Water with 7 000 mg/L TDS or more can cause a loss in overall condition and a reduction in weight gain for all livestock. Excessively saline water (greater than 10 000 mg/L), especially when used in large amounts, can cause physiological upset and ultimately death in the majority of terrestrial animals, including humans.

In most parts of Alberta, natural surface waters usually have TDS concentrations well below 3 000 mg/L. However, water bodies in some locations have 7 000 mg/L or more, high enough to be dangerous for cattle (MacAlpine and Howard 1995). If water with TDS between 7 000 and 10 000 mg/L must be used, then its use should be limited to a short period of time. A sudden change from non-saline water to very saline water can initiate toxic symptoms and in some cases may cause death.

In the M.D. of Provost, electrical conductivity was measured in 43 water bodies. An EC reading of 8 ds/m is equivalent to 7000 mg/L TDS. Thus, water bodies with greater than 8 ds/m are a potential danger for cattle. Table 4 identifies the locations and measured EC values for the sampled water bodies. Twenty-one permanent or semi-permanent water bodies had readings of 8 ds/m or more (Figures 9a to 9n); the values ranged from 8 to more than 50 ds/m. These water bodies should be avoided for watering cattle. It should also be noted that salinity and TDS concentrations will increase during the summer if drought conditions persist. The data in Table 4 could be used in further investigations by water quality specialists or livestock specialists.

The saline water bodies occur mainly in the northwest portion of the M.D. (Twp. 39 Rge. 8 and Twp. 41, 42 Rge. 6, 7, 8). Non-saline water bodies occur throughout the M.D.

**Table 4. Water sample locations and EC measurements in the M.D. of Provost**

Legal location	EC (ds/m)	Legal location	EC (ds/m)
SE 15-36-1 W4	1.1	SE 11-42-6 W4	36.0
SW 27-36-1 W4	0.9	SW 14-38-6 W4	1.0
SE 26-36-1 W4	1.0	SW 11-38-6 W4	5.0
SE 27-36-1 W4	10.0	SW 12-38-6 W4	18.0
NE 12-39-1 W4	1.9	NW 24-38-6 W4	5.0
SW 9-39-2 W4	5.0	SW 28-39-7 W4	12.0
SE 18-39-2 W4	5.0	NE 28-40-7 W4	0.6
SE 4-38-2 W4	7.0	SW 4-41-7 W4	>50.0
SW 18-39-3 W4	39.0	NW 5-41-7 W4	3.3
NE 32-39-3 W4	8.0	SE 7-41-7 W4	20.0
NW 22-40-3 W4	1.8	NE 2-42-8 W4	16.0
NE 9-40-4 W4	27.0	SE 9-42-8 W4	2.3
NW 30-38-5 W4	1.3	SW 9-42-8 W4	0.3
NE 20-38-5 W4	20.5	NE 8-42-8 W4	1.5
SW 14-38-5 W4	10.5	NE 18-42-8 W4	11.0
SE 5-38-5 W4	1.5	SW 19-42-8 W4	1.2
NE 3-39-5 W4	21.0	SW 17-39-8 W4	23.0
SE 26-41-5 W4	2.5	SE 30-39-8 W4	25.0
SW 13-39-6 W4	>50.0	SW 30-39-8 W4	27.0
NE 20-40-6 W4	1.7	SW 8-40-9 W4	10.0
SW 30-40-6 W4	3.2	NE 34-40-9 W4	3.2
NE 8-41-6 W4	19.0		

Figure 9a

Figure 9b

Figure 9c

Figure 9d

Figure 9e

Figure 9f

Figure 9g

Figure 9h

Figure 9i

Figure 9j

Figure 9k

Figure 9I

Figure 9m

Figure 9n

## 5.0 Saline Seep Distribution in the M.D. of Provost

This section describes the number and size of saline seeps for all types of salinity and for contact/slope change salinity in the M.D. of Provost. These two examples indicate the general tendencies for the other salinity types.

The M.D. of Provost has 1 851 saline seeps which occupy a total of 16 099.20 ha (39 768 ac), representing 4.3% of the M.D.'s total area. This project depicts salinity which is visible on the soil surface. Most of the visible saline areas are out of agricultural production or have significantly reduced crop yields. However, the effects of salinity on crop yields are not usually limited to the visible saline areas. Often the surrounding lands have saline subsoils, resulting in a greater salinity risk. The salts in the subsoil can rise up into the root zone if weather conditions or cropping practices change. Thus, salinity control practices may benefit crop yields over a much broader area than just the visible seep.

Table 5 presents the number, area and percentage of the total saline area for each of the five salinity types in the M.D. Depression bottom salinity occupies the greatest area (85.8% of all saline land in the M.D.), followed by coulee bottom salinity (9.8%), contact/slope change salinity (4.2%), outcrop salinity (0.2%) and artesian salinity (0.009%). There is no evidence that slough ring salinity occurs in the M.D. Also, there are no irrigated lands in the M.D., thus there is no irrigation-related salinity.

**Table 5. Salinity distribution by type in the M.D. of Provost**

Salinity type	Number of seeps	Area		Percent of total saline area
		(ac)	(ha)	
Contact/slope change	338	1 654.9	670.0	4.2
Outcrop	15	83.2	33.7	0.2
Depression bottom	1 448	34 155.4	13 828.4	85.8
Coulee bottom	49	3 867.8	1 565.9	9.8
Artesian	1	3.7	1.5	0.0
Slough ring	-	-	-	-
Irrigation canal seepage	-	-	-	-
Natural/irrigation	-	-	-	-
<b>Total</b>	<b>1 851</b>	<b>39 765.0</b>	<b>16 099.5</b>	<b>100.0</b>

Figure 10 shows the number of saline seeps by type. Depression bottom salinity is the predominant salinity type in the M.D., with 1 448 seeps occupying 13 828 ha (34 155 ac). There are 49 coulee bottom seeps occupying 1 566 ha (3 868 ac). Contact/slope change salinity consists of 338 seeps occupying 670 ha (1 655 ac). Outcrop salinity is a minor salinity type, consisting of 15 seeps occupying 34 ha (83 ac). Only one artesian saline seep occurs in the M.D. It has an area of 1.5 ha (3.7 ac).


Overall, there are many small contact/slope change saline seeps with the average size of 2.0 ha (4.95 ac), and fewer but larger coulee bottom seeps with an average area of 32 ha (79 ac). The average size of all saline seeps in the M.D. is 8.7 ha (21.5 ac).

Figure 11 shows the frequency of different size ranges for all saline seeps. The seep areas vary from 0.0018 ha (0.0044 ac) to 446 ha (1 102 ac). Eighty-nine percent of the total saline area consists of 557 seeps which are over 4 ha (10 ac) in size. Thirty-one seeps are larger than 100 ha (247 ac). All seeps larger than 4 ha are depression bottom or coulee bottom seeps. Only 0.05% of all saline land consists of small seeps with an average size 0.81 ha (2.0 ac). These small seeps are mainly contact or outcrop saline seeps.


The areas for contact/slope change saline seeps are shown in Figure 12. Of the 338 contact/slope change seeps, 33% are between 0 and 3.0 ha (0 and 7.4 ac). Only seven seeps are larger than 6 ha (15 ac) but they occupy 58% of the total contact/slope change saline area.

The recommended measures to control contact/slope change salinity are to grow salt-tolerant grasses in the saline area and alfalfa in the dominant recharge area. On average, dominant recharge areas are about three times the size of their saline area. Thus, as a general guide, an area about three times the size of the seep will need to be converted to alfalfa to control contact/slope change seeps.


**Figure 10. Number of Saline Seeps by Type in the M.D. of Provost**

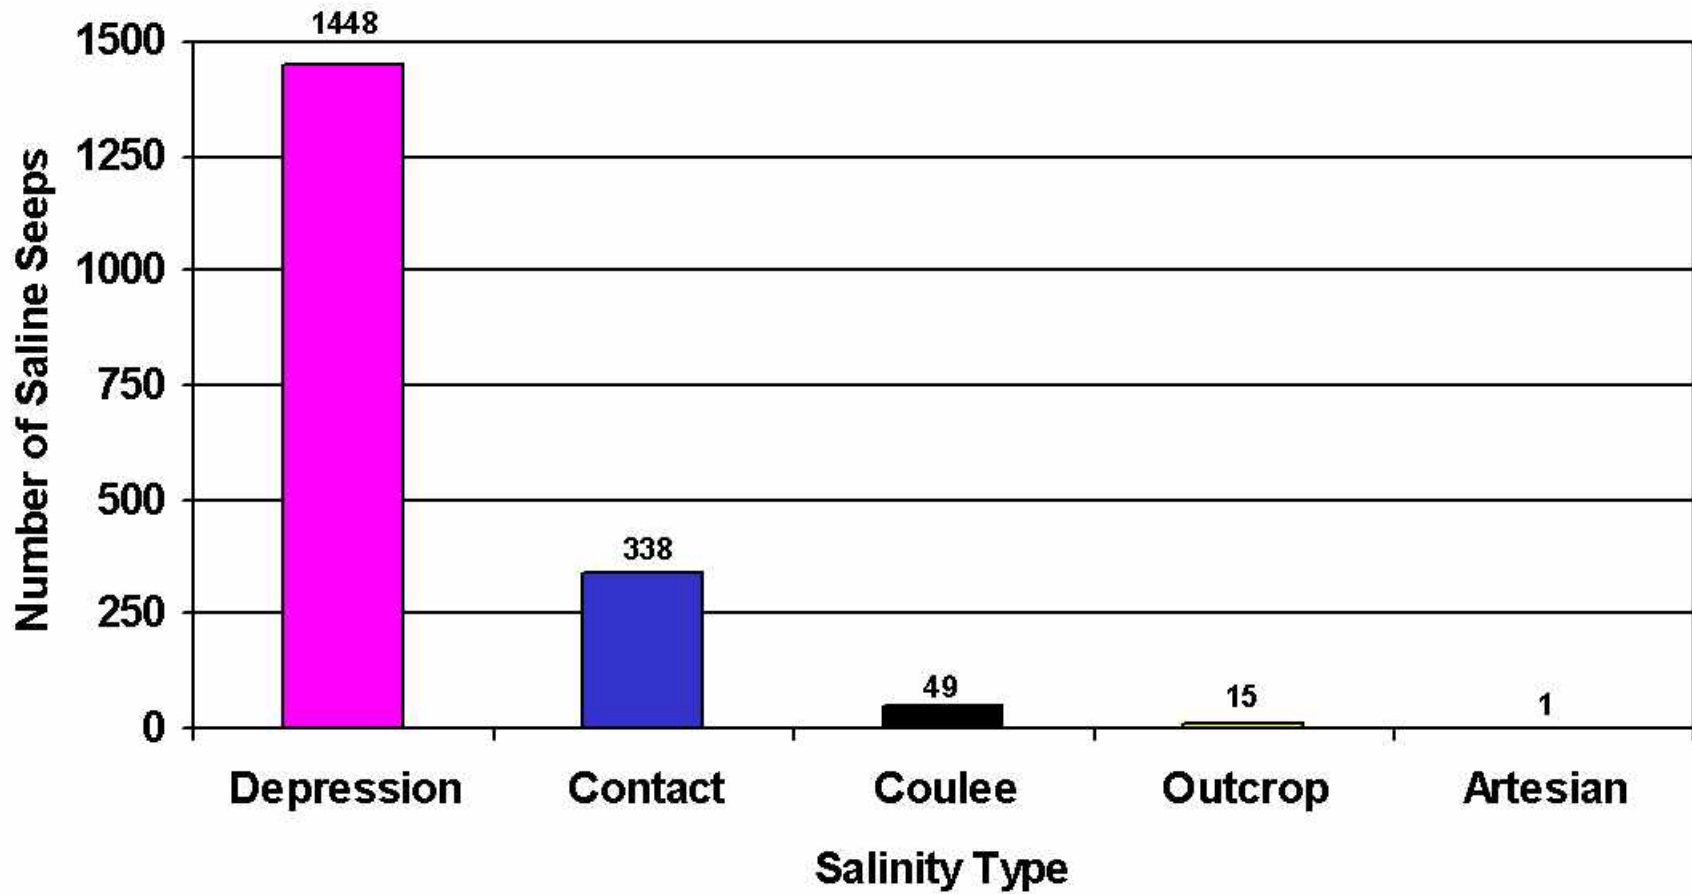

**Figure 11. Number and Size of Total Saline Seeps  
in the M.D. of Provost**

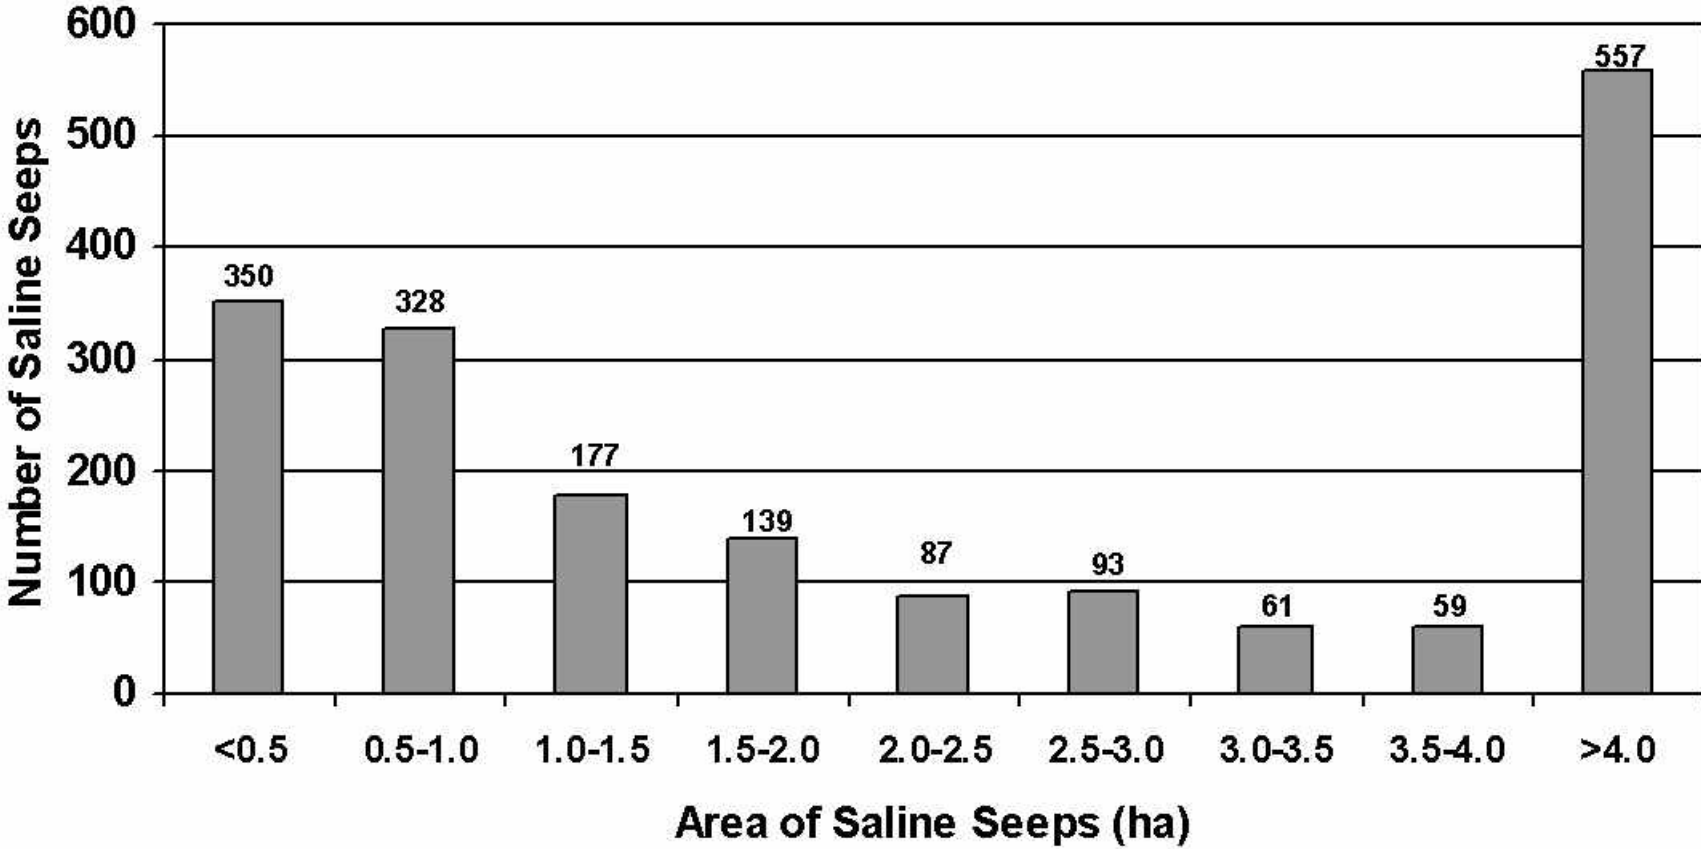

**Figure 12. Number and Size of Contact/Slope Change Saline Seeps in the M.D. of Provost**

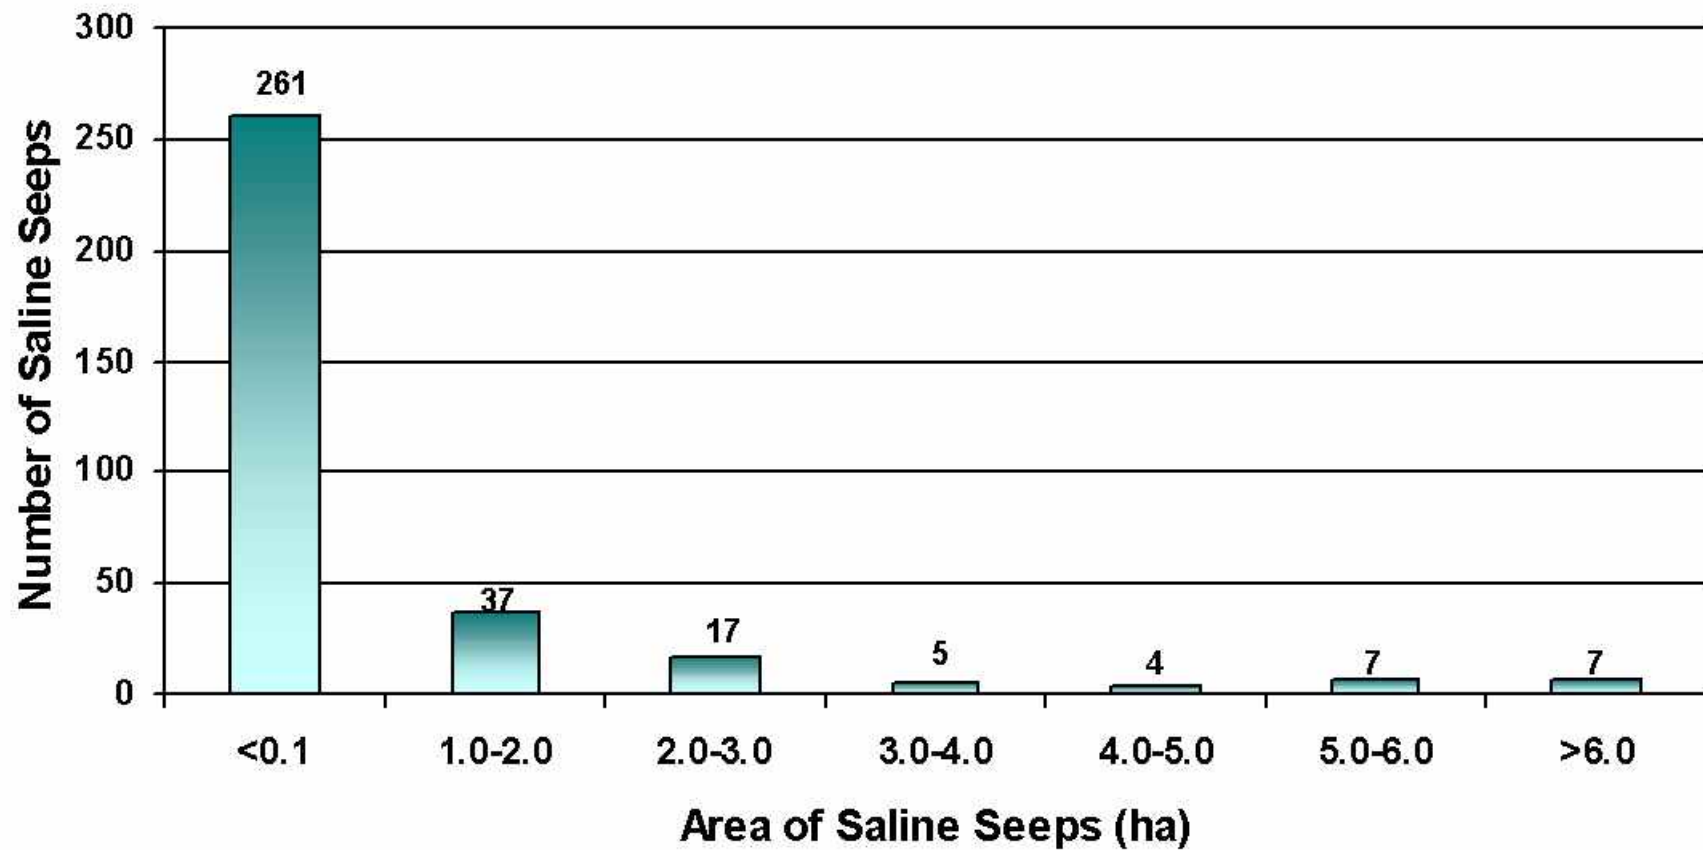

## 6.0 References

- Agriculture Canada. 1976. Glossary of terms in soil science. Agriculture Canada, Research Branch, Ottawa. Publication 1459, revised. 44 pp.
- Currie, D.V. and Zacharko, N. 1976. Hydrogeology of the Vermilion area, Alberta. Report 75-5. Alberta Research Council. 15 pp. 2 maps.
- Greenlee, G.M., Pawluk, S. and Bowser, W.E. 1968. Occurrence of soil salinity in the dry lands of southern Alberta. Canadian Journal of Soil Science. 48: 65-75.
- Kwiatkowski, J., Marciak, L.C., Wentz, D., and Vanderpluym, H. 1994. Salinity mapping by landscape, County of Vulcan, Alberta. Alberta Agriculture, Food and Rural Development and Agriculture and Agri-Food Canada, Edmonton.
- MacAlpine, N.D. and Howard, A. 1995. Farm water management manual. Conservation Manual Series. Alberta Agriculture, Food and Rural Development, Conservation and Development Branch, Edmonton.
- Task Force on Water Quality Guidelines of the Canadian Council of Ministers of the Environment. 1987. Chapter 4.0 Agricultural Uses. *In*: Canadian Water Quality Guidelines. Environment Canada, Inland Waters Directorate, Water Quality Branch, Ottawa.
- Vanderpluym, H. and Harron, B. 1992. Dryland salinity investigation procedures manual. Alberta Agriculture, Conservation and Development Branch, and Agriculture Canada, Prairie Farm Rehabilitation Administration.
- Wyatt, F.A., Newton, J.D., Bowser, W.E., and Odynsky, W. 1938. Soil survey of Sullivan Lake sheet. University of Alberta, College of Agriculture. 102 pp. 2 maps.
- Wyatt, F.A., Newton, J.D., Bowser, W.E., and Odynsky, W. 1944. Soil survey of Wainwright and Vermilion sheets. University of Alberta, College of Agriculture. 122 pp. 2 maps.

## Glossary

**Aquifer** - A body of earth material capable of transmitting water through its pores at a rate sufficient for water supply purposes. (Vanderpluym and Harron 1992)

**Artesian groundwater** - Groundwater confined under pressure so that water rises up in a non-pumping well which penetrates it.

**Bedrock** - The solid rock that underlies the soil and regolith or that is exposed at the surface. (Agriculture Canada 1976)

**Capillary action** - The action by which the surface of a liquid, where it is in contact with a solid, is elevated or depressed depending on the forces of adhesion and cohesion.

**Electrical conductivity** - A method of expressing salinity. An electrical conductivity (EC) measurement can be used to determine the salt content of soil in a saturated soil paste extract. The EC value is usually expressed in decisiemens/metre (ds/m). For example, topsoil with an EC value of 2 ds/m is considered non-saline; topsoil with an EC value of 16 is very saline.

**Groundwater** - 1) Water that is passing through or standing in the soil and the underlying strata. It is free to move by gravity. (Agriculture Canada 1976). 2) Water in the ground that is in the zone of saturation, from which wells, springs and groundwater runoff are supplied. (Vanderpluym and Harron 1992)

**Parent material** - The unconsolidated and more or less chemically weathered mineral or organic matter from which the solum of a soil has developed. (Agriculture Canada 1976)

**Permeability, soil** - The ease with which gases and liquids penetrate or pass through a bulk mass of soil or a layer of soil. (Agriculture Canada 1976)

**Saline soil** - A non-sodic soil containing enough soluble salts to interfere with the growth of most crop plants. The conductivity of the saturation extract is greater than 4 ds/m (at 25°C), the exchangeable sodium percentage is less than 15, and the pH is usually less than 8.5. (Agriculture Canada 1976)

**Seepage** - 1) The emergence of water from the soil over an extensive area, in contrast to a spring where water emerges from a local spot. (Agriculture Canada 1976). 2) The slow movement of water through small cracks, pores, interstices, etc. of a material into or out of a body of surface or subsurface water. (Vanderpluym and Harron 1992)

**Till** - Unstratified sediment deposited directly by a glacier and consisting of clay, sand, gravel and boulders intermingled in any proportion. (Agriculture Canada 1976)

For further information, please visit [www.agric.gov.ab.ca](http://www.agric.gov.ab.ca)

## **Other Municipal Salinity Mapping reports for Alberta (as of 1997)**

Kwiatkowski, J., Marciak, L.C., Wentz, D., and Vanderpluym, H. 1994. Salinity mapping by landscape, County of Vulcan, Alberta. Alberta Agriculture, Food and Rural Development and Agriculture and Agri-Food Canada, Edmonton.

Kwiatkowski, J., Marciak, L.C., Wentz, D., and Vanderpluym, H. 1994. Salinity mapping within the Municipal District of Cypress, Alberta. Alberta Agriculture, Food and Rural Development and Agriculture and Agri-Food Canada, Edmonton.

Kwiatkowski, J., Marciak, L.C., Wentz, D., and King, C.R. 1995. Salinity mapping for resource management within the County of Forty Mile, Alberta. Alberta Agriculture, Food and Rural Development and Agriculture and Agri-Food Canada, Edmonton.

Kwiatkowski, J., Marciak, L.C., Wentz, D., and King, C.R. 1995. Salinity mapping for resource management within the County of Wheatland, Alberta. Alberta Agriculture, Food and Rural Development and Agriculture and Agri-Food Canada, Edmonton.

Kwiatkowski, J., Marciak, L.C., Wentz, D., and King, C.R. 1995. Salinity mapping for resource management within the M.D. of Willow Creek, Alberta. Alberta Agriculture, Food and Rural Development and Agriculture and Agri-Food Canada, Edmonton.

Kwiatkowski, J., Marciak, L.C., Wentz, D., and King, C.R. 1996. Salinity mapping for resource management within the County of Flagstaff, Alberta. Alberta Agriculture, Food and Rural Development and Agriculture and Agri-Food Canada, Edmonton.

Kwiatkowski, J., Marciak, L.C., Wentz, D., and King, C.R. 1996. Salinity mapping for resource management within the County of Lethbridge, Alberta. Alberta Agriculture, Food and Rural Development and Agriculture and Agri-Food Canada, Edmonton.

Kwiatkowski, J., Marciak, L.C., Wentz, D., and King, C.R. 1996. Salinity mapping for resource management within the County of Warner, Alberta. Alberta Agriculture, Food and Rural Development and Agriculture and Agri-Food Canada, Edmonton.

Kwiatkowski, J., Marciak, L.C., Wentz, D., and King, C.R. 1996. Salinity mapping for resource management within the M.D. of Rocky View, Alberta. Alberta Agriculture, Food and Rural Development and Agriculture and Agri-Food Canada, Edmonton.

Kwiatkowski, J. and Pittman, J. 1997. Salinity mapping for resource management within the Blood Indian Reserve, Alberta. Alberta Agriculture, Food and Rural Development and Agriculture and Agri-Food Canada, Edmonton.

Pittman, J. and Kwiatkowski, J. 1997. Salinity mapping for resource management within the County of Camrose, Alberta. Alberta Agriculture, Food and Rural Development and Agriculture and Agri-Food Canada, Edmonton.

Kwiatkowski, J. and Pittman, J. 1997. Salinity mapping for resource management within the M.D. of Provost, Alberta. Alberta Agriculture, Food and Rural Development and Agriculture and Agri-Food Canada, Edmonton.

Kwiatkowski, J. and Pittman, J. 1997. Salinity mapping for resource management within the M.D. of Taber, Alberta. Alberta Agriculture, Food and Rural Development and Agriculture and Agri-Food Canada, Edmonton.